 




Discover more about Lightspeed audio solutions by visiting us at booth 67 in the sponsor hall

 
USING THE FLEXMIKE

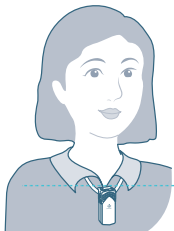

Remove microphone from charger. Press the mute button to unmute, hold near your mouth and begin speaking.

ALIGN WITH COLLARBONE

The flex microphone comes with a magnetic lanyard. To place the flexmike on your body, separate the magnets to unclasp the lanyard. Place the lanyard behind your neck and then reconnect the lanyard's magnet behind your neck.

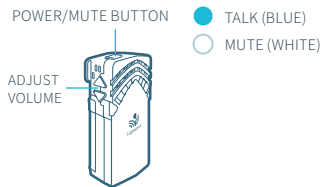

CHARGE MICROPHONES NIGHTLY

 
Place the microphones into the cradle charger. The power status light will glow red when it is charging.

When charging is complete, the power status light will glow green.

It takes about 5-6 hours to fully charge the microphone battery.

- TALK (BLUE)
- MUTE (WHITE)
- NORMAL OPERATION
- CHARGING IN PROGRESS
- CHARGING COMPLETE

POWER STATUS LIGHT

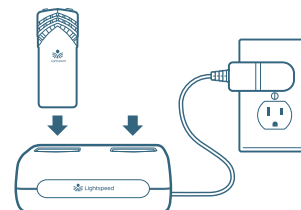


CONNECTING MEDIA CONNECTOR TO AUDIO

Audio can be connected using either a digital 2-way USB audio or analog audio.

USB Audio

If locating and connecting to computer USB, Media Connector will default to digital USB audio (3.5mm analog audio ports will be disabled). USB audio enables a 2-way audio link to:

 Send audio **from the computer** to Redcat to ensure all audio can be played through the Redcat speaker.

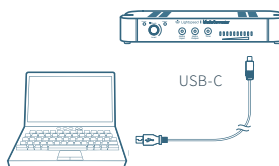

COMPUTER SETTINGS

Once connected, open computer sound setting to select "Lightspeed Audio" as the microphone and speaker.



Analog Audio

Plug your external audio equipment (e.g., video display) into one of the Audio input jacks.



Adjust the volume as needed by pressing the Audio Input selector and adjusting the level knob as needed.

